

PetSafe® 

User Guide

Guide d'utilisation

Bedienungsanleitung

Manuale di istruzioni

Guía del usuario

Gebbruikershandleiding

Brugsanvisning

Användarhandbok

Instrukcja obsługi

Használati útmutató






Collarless Ultrasonic Trainer


What you have:



Trainer

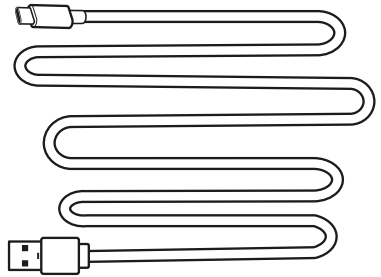


Charging cable
(USB-C to USB-A)

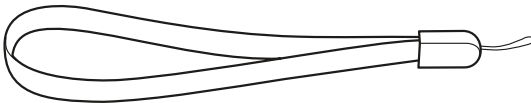

Wrist strap

Important: For important safety and warranty information, please see the **Let us help!** guide included with your product.


1

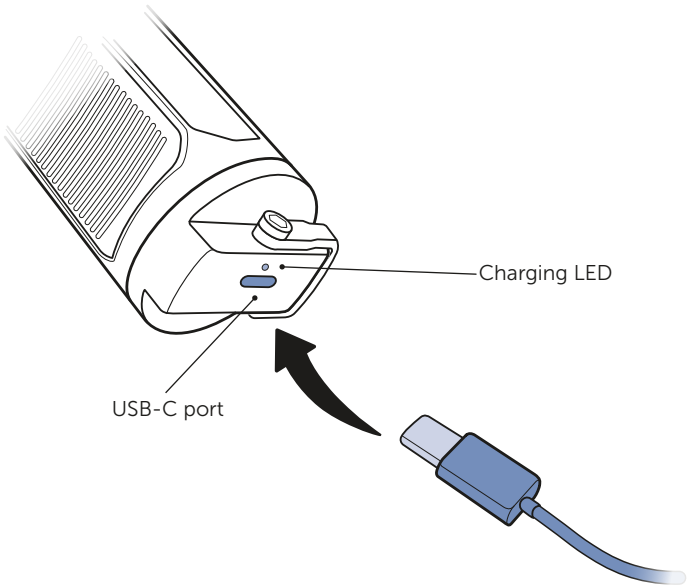



Charge the trainer by connecting the charging cable to the USB-C port at the bottom and then plugging it into a USB-A outlet or adaptor.

The charging LED next to the USB-C port will glow red when charging and green when fully charged.

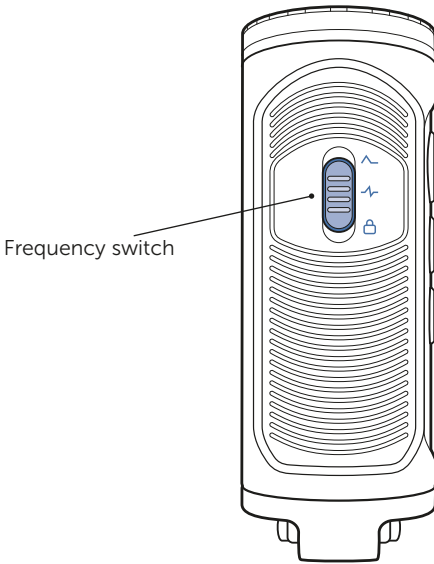
Each charge lasts up to 15 days, depending on usage. The indicator light on the front of the trainer will glow red when the battery is low.




 

To turn the trainer on, slide the frequency switch to either:

- : Fixed frequency (25kHz)
- : Variable frequency (20kHz-30kHz)

We recommend starting with fixed frequency and switching to variable frequency if needed.

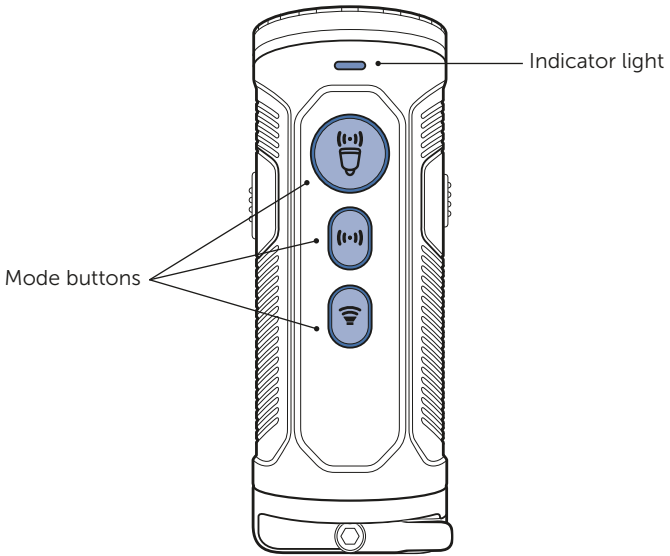

Test the trainer by pressing one of the mode buttons:

- : Audible tone
- : Ultrasonic tone
- : Ultrasonic tone with flashing light


The trainer will vibrate and the indicator light will flash green to show it's working.



To manage an unwanted behaviour, hold the trainer within 9 metres of your dog and press one of the mode buttons, while giving a verbal command such as "Stop." Press and release for a 1-second stimulation; press and hold for continuous stimulation.

Important: To protect your dog, the trainer will time out after 8 seconds of ultrasonic stimulation. Press the button again if additional stimulation is needed.

Every dog responds differently, so try the different sound modes and frequency settings to see what works best for your dog.

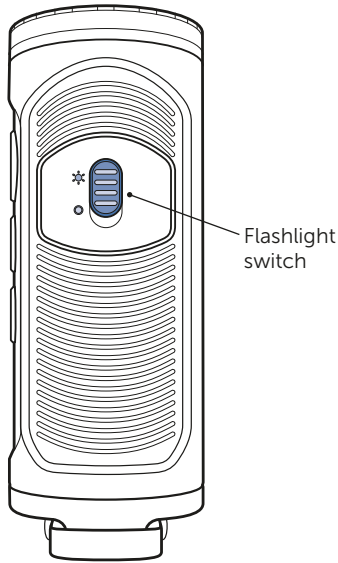

To use the built-in flashlight, slide the flashlight switch to the on position (☼).

To turn the trainer off, slide the frequency switch to the locked position (⊠). This locks all buttons except the flashlight switch.

If desired, attach the wrist strap to the handle at the bottom of the trainer.

That's it! We hope the PetSafe® Collarless Trainer helps you enjoy many more peaceful walks and playtimes with your pup.