

PetSafe® 

User Guide

Guide d'utilisation

Bedienungsanleitung

Manuale di istruzioni

Guía del usuario

Gebbruikershandleiding

Brugsanvisning

Användarhandbok

Instrukcja obsługi


Használati útmutató






Pro Dog Trainer Add-A-Dog® Collar


What you have:

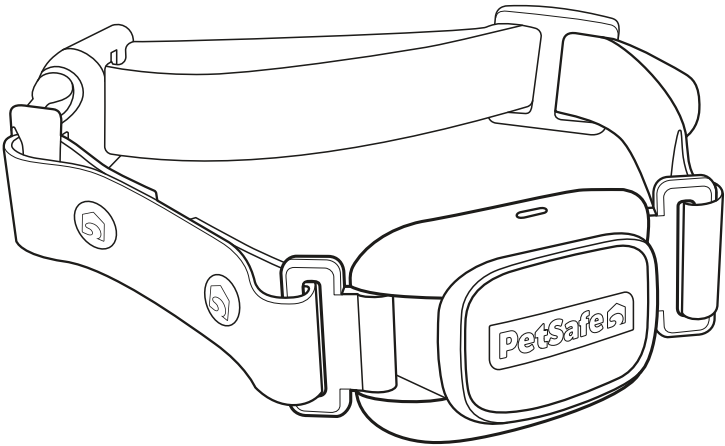


Collar
with medium contact points

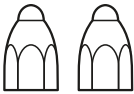

Long contact points

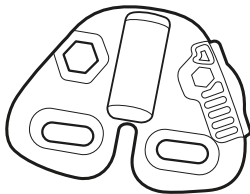

Test light tool

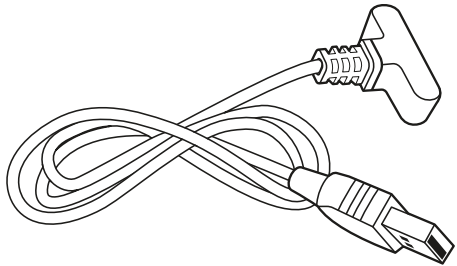


USB-A charging cable
(USB-A adaptor not included)

Important: For important safety and warranty information, please see the **Let us help!** guide included with your product.

Charge the collar

1

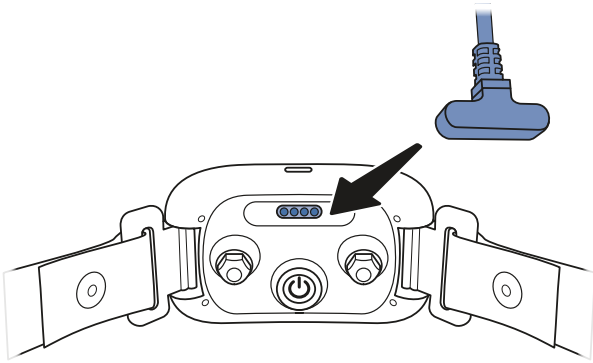


Connect the USB-A charging cable to the magnetic charging port on the back of the collar and then plug it into a USB-A power outlet or adaptor. Leave the collar plugged in until fully charged; this will take about 2 hours.

The LED on the top of the collar will glow solid green when the collar is charging and will start flashing green when the collar is fully charged.

Each charge can last up to 20 hours, depending on frequency of use. The collar LED will flash red when the collar needs to be charged. To maximise battery life, turn off the collar when not in use.

Fit the collar

2

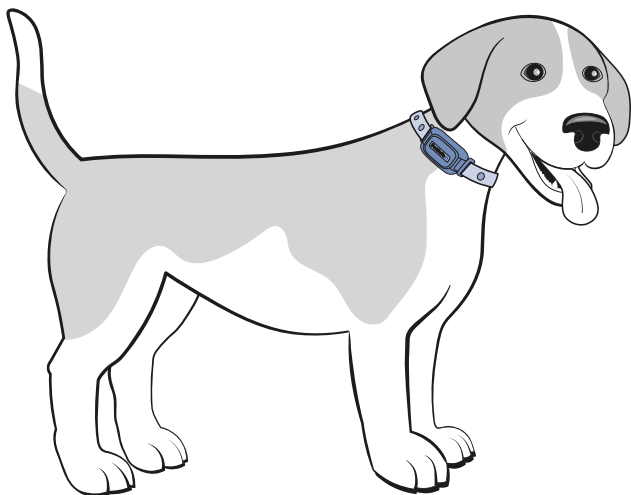

With the collar turned off and your dog standing comfortably, place the collar high around their neck, close to the ears. The contact points should be on the side of your dog's neck, touching the skin. If your dog has long or thick hair, it may be necessary to switch to the long contact points provided or trim (not shave) the hair around the contact points to make sure that contact is consistent.

Important: Check the tightness of the collar by inserting one finger between the end of a contact point and your dog's neck. The fit should be snug but not constricting. If your dog shakes their head after fitting, the collar should not move. Recheck the fit of the collar frequently as your dog becomes comfortable wearing it.


Once you are satisfied with the fit of the collar, remove it from your dog and trim the excess strap, making

sure to allow room for growth or a thicker winter coat.

Important: Do not leave the collar on your dog for more than 12 hours a day, and never attach a lead to it — use a separate collar or harness for that. See the **Let us help!** guide included with the product for more important safety information about how to fit and use the collar.


Pair the collar with your remote

3

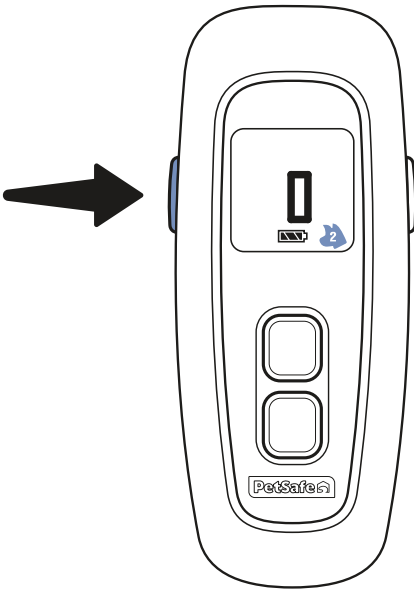

Press and hold the button on the left side of the remote until the remote displays the Dog 2 icon.


You received this remote when you purchased the Pro Dog Trainer.

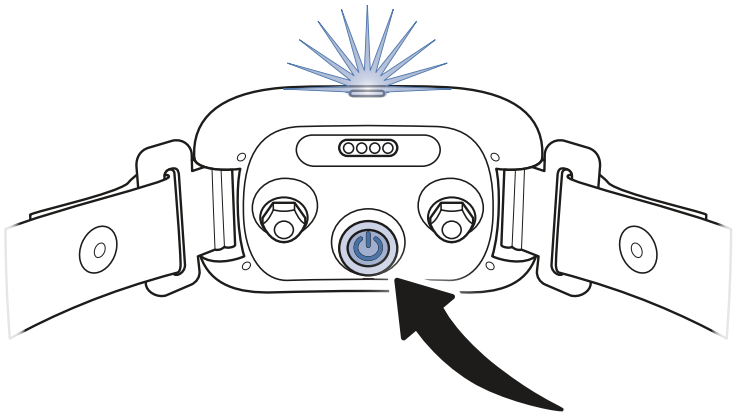

If the collar is on, turn it off by pressing and holding the power button for 3 seconds. The collar will beep high to low and the collar LED will flash red one time and then turn off.

With the collar turned off, press and hold the power button. The collar LED will glow green and then (after about 5 seconds) turn off. When the LED turns off, release the power button. The collar is now in pairing mode.

5

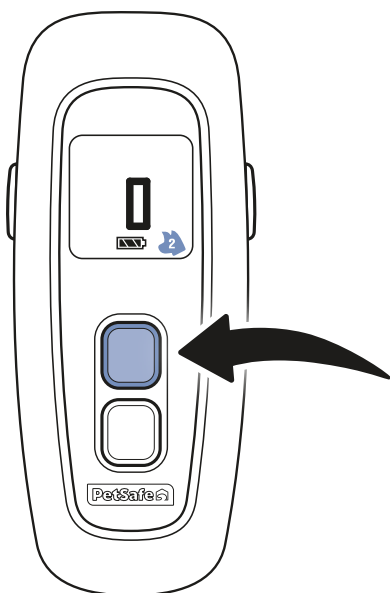

Press the vibration/static button on the remote. The collar LED will flash green 5 times to confirm it is paired with the remote.

Find the best stimulation level for your pet

6

The next step is to find your pet's "recognition level." The recognition level is the lowest stimulation level that your dog begins to notice. **Important:** Always start at the lowest stimulation level and work your way up.

- Turn the collar on by pressing the power button for 1 second. The collar will beep low to high, and the collar LED will flash blue one time to indicate the collar is turned on.
- Place the collar on your dog.
- Take your dog to a calm environment where they are unlikely to be excited or distracted.

d. Select level 0 on the remote and then press and hold the vibration/static button for 1 to 2 seconds. Watch your pet for a reaction.

Important: You are looking for a very slight reaction such as your dog twitching their ears or picking up their head and looking around. Your dog should not vocalise or panic when receiving a stimulation. If this happens, the stimulation is too high and you need to go back to the previous level.

e. If your pet shows no reaction to the vibration, move on to static stimulation. Select level 1 on the remote and then press and hold the vibration/static button for 1 to 2 seconds. Watch your pet for a reaction.

f. If your pet shows no reaction, repeat this stimulation level several times before moving up to the next level.

g. Continue moving up through the static levels until your pet reliably responds to the stimulation.

h. If your pet continues to show no response at level 19, check the fit of the collar. You might also want to test it on your hand at a lower level to make sure the collar is working.

Important: Please note that during instances of high or extreme distraction, higher levels of stimulation may be required to get your dog's attention.

Once you've found your pet's recognition level, you're ready to start using your new Pro Dog Trainer Add-A-Dog® Collar.

We recommend marking your training collars so you'll know which is which (Dog 1 or Dog 2). To deliver a tone or stimulation to:

- The original collar that came with your system (Dog 1), use the left button to select Dog 1 and then press the tone or vibration/static button.
- The new Add-A-Dog® collar (Dog 2), use the left button to select Dog 2 and then press the tone or vibration/static button.

The remote will save the most recent stimulation level used for each pet; when you switch between pets, the stimulation level will switch automatically.